


* Technical Notes


- If using a USB hub with the device, make sure that it is externally powered (plugs into wall). For best performance avoid using a USB hub.
- Windows 2000, XP, and Vista users must be logged in as an administrator to install the USB drivers. If you only have one user login on your computer, you probably have administrator privileges.
- When using a SLIM:V100 camera, a lens must be used to track or capture video.

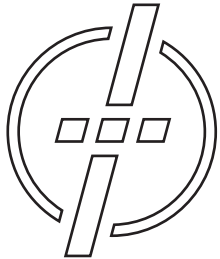


Friendly Customer Service

If you have any difficulties after reviewing the documentation, visit our website or call 1.541.753.6645 between 9AM-5PM PT.

Visit www.OptiTrack.com for the latest software support, sample code, and product news.

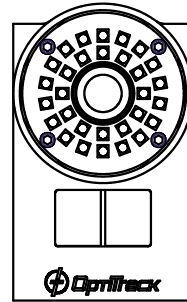


FLEX:V100

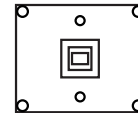

SLIM:V100


1. Install Software

Download the latest software installer from the website or use software CD if included. Run the installer and follow its prompts.

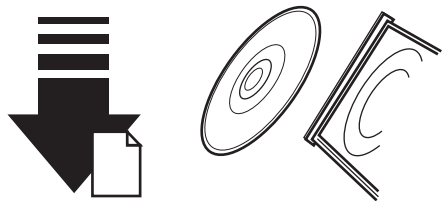

2. Plug In Hardware

Connect the device's cord to your computer's USB port.

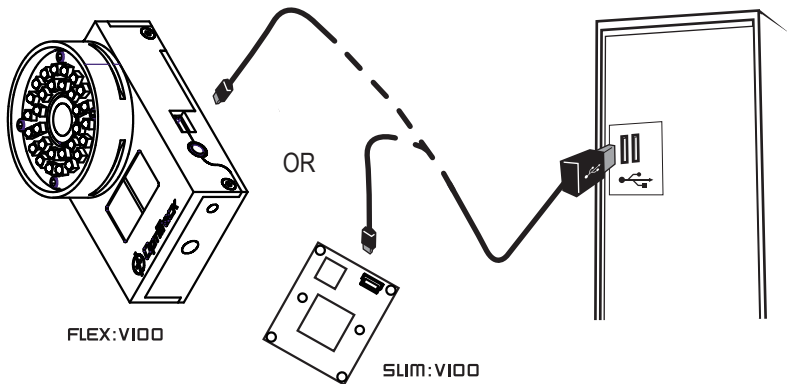

* Synchronizing Multiple Cameras (FLEX cameras only)

Multiple OptiTrack cameras may be optionally synchronized for greater precision.

- First connect all cameras to computer via USB.
- Plug in Camera Sync Splitter for each camera.
- Connect master camera's "out" connector to slave camera's "in" connector using Sync Cable (sold separately).
- Initiate camera synchronization via software.

